



# Safety Instructions


1. Read all of these instructions.
2. Save these instructions for later use.
3. Follow all warnings and instructions in this manual and on the product.
4. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
5. Do not use this product near water.
6. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product or nearby people.
7. Please comply with the following conditions:
  - A. Allow a minimum distance of 10cm around the apparatus for sufficient ventilation.
  - B. The ventilation openings should not be impeded by items such as paper, table-cloths, curtains, etc..
  - C. No naked flame sources, such as lighted candles, should be placed on the apparatus.
  - D. Please dispose of all batteries according to local regulations.
  - E. Use the monitor in moderate climates.
8. This product should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
9. This product is equipped with a 3 wire grounding type plug having a third (grounding) pin. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to update the outlet. Do not defeat the purpose of the grounding-type plug.
10. Do not allow anything to rest on the power cord or place this product where people will walk on the cord.
11. If an extension cord is used with this product, make sure that the total ampere ratings on the products plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the all of the products plugged into the wall outlet do not exceed the rating of the outlet.
12. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts, which could result in the risk of fire or an electric shock. Never spill any kind of liquid on the product.
13. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to trained personnel.
14. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - A. When the power cord or plug is damaged or frayed.
  - B. If liquid has been spilled into the product.
  - C. If the product has been exposed to rain or water.
  - D. If the product does not operate normally when the operating instructions are followed.

Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore normal operation.
  - E. If the product has been dropped or the cabinet has been damaged.
  - F. If the product exhibits a distinct change in performance, indicating a need for service.

# Contents of Package



CCTV LED Monitor

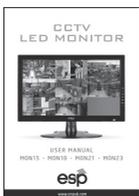

User Manual




Power Supply & Cord




HDMI Cable

# Monitor Inputs

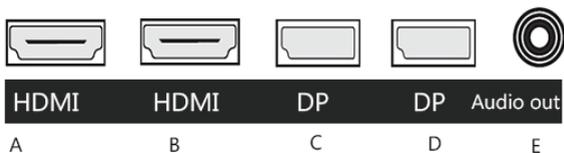

- A. HDMI1 port
- B. HDMI2 port
- C. DP1 port
- D. DP1 port
- E. Audio out

# Monitor Controls

 

## VOL+

Press the button to choose PICTURE,COLOR,OSD,INFORMATION  
Key for volume, press VOL+ to increase volume

## VOL-

Press the button to choose PICTURE,COLOR,OSD,INFORMATION

## CH+

Key for volume, press CH+, volume OSD shows up, press VOL+/VOL-  
to adjust volume.

## CH-

Key for aspect ratio,16:9 or 4:3

## MENU

Press the button to show OSD  
Press MENU to choose a item.

## SOURCE

Press the button to select signal input: HDMI1,HDMI2,DP1,DP2  
Press the button to backward.


## POWER

Press the power to turn on or off

# Monitor OSD Adjustments


## Picture

PC menu can set contrast, brightness, sharpness Press MENU button to move first, then press CH+/CH- button to choose specific items. Then press MENU to confirm and press VOL+/VOL- to adjust value.

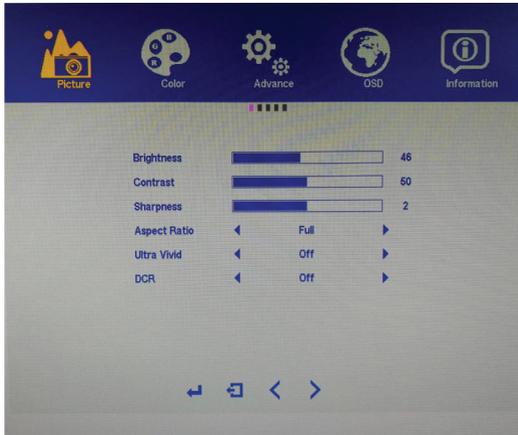

## Color


Color menu can set color effect, saturation, Gama, Temperature. Press MENU button to move first, then press CH+/CH- button to choose specific items. Then press MENU to confirm and press VOL+/VOL- to adjust value.

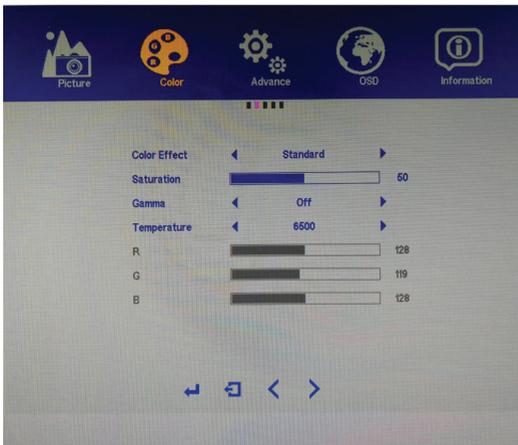

# Monitor OSD Adjustments

## OSD

OSD menu can set Language, Menu time , OSD H.Position, OSD V.Position, Transparency, Reset. Press MENU button to move first, then press CH+/CH- button to choose specific items. Then press MENU to confirm and press VOL+/VOL- to adjust value.

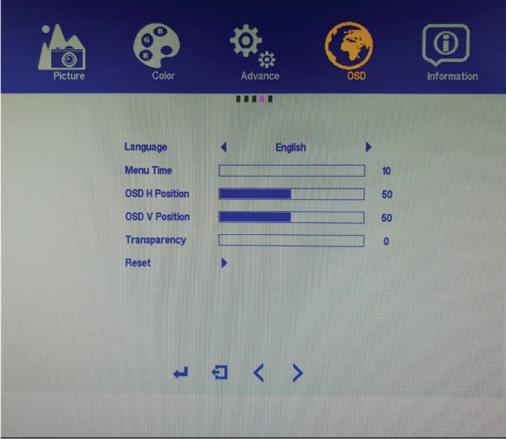

<b>Screen diagonal dimension</b>	28 inch
<b>Screen Size</b>	648.9 x369.3 mm
<b>W x H</b>	
<b>Led Type</b>	LED
<b>Pixel Pitch</b>	0.16 mm x 0.16 mm
<b>Screen Maximum Resolution</b>	3840x2160
<b>Refresh Rate(vertical Frequency)</b>	60 Hz
<b>Color Depth</b>	1.073B
<b>Brightness</b>	300 cd/m <sup>2</sup>
<b>Auto Adjust</b>	Yes
<b>Monitor Aspect Ratio</b>	16:9
<b>Display Aspect Ratio</b>	OSD selectable16:9 or 4:3
<b>Contrast Ratio</b>	1000:1
<b>Response Time(ms)</b>	5ms
<b>View Angle H/V(degrees)</b>	170°/160°
<b>Digital Video Inputs</b>	HDMI /DP up to 3840x2160
<b>Port inputs</b>	DP*2,HDMI*2+AUDIO OUT
<b>OSD Languages</b>	English
<b>Case material</b>	Plastic case
<b>VESA Mounting Pattern</b>	100mmx100mm
<b>Base/Stand included</b>	Base
<b>Net weight</b>	5.65KG
<b>Gross Weight</b>	7KG
<b>Power- Watts(on and standby)</b>	<40W
<b>Power input</b>	12V,5A.
<b>Operating Temperature</b>	32° ~ 104°(0°C ~ 40°C)
<b>Storage Temperature</b>	-4° ~ 140°(-20°C ~ 60°C)
<b>Operating Humidity</b>	10 ~ 85%



Elite Security Products  
Unit 7, Target Park, Shawbank Rd  
Lakeside, Redditch B98 8YN



Telephone: 01527 51 51 50  
Fax: 01527 51 51 43  
email: [info@espuk.com](mailto:info@espuk.com)  
E&OE- Errors and omissions excepted L17